




SUPERFLUSH MERCURY MARINE VERADO SERIES EASY INSTALLATION GUIDE

Beginning the installation: Find the Verado Easy Install Kit included in the SF 200 kit. It is shown to the Right. You will need a common screwdriver, and a tubing cutter for this part of the installation. Mechanic's gloves are always suggested for both safety and ease of installation.

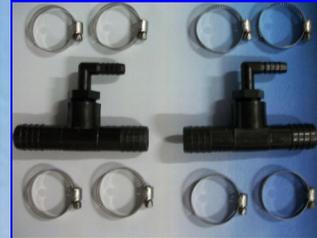

STEP 1: Facing the rear of the engine power head, identify injection point #1 as indicated by the yellow arrow in the picture to the right. At the position indicated, remove a 1" section of the hose with tubing cutters.



Step 2: Insert the Verdao Easy Injector # 1 in this location and "double" clamp as shown in the picture to the left. Using the clamps provided install the 3/8" injector line as shown by the orange arrow.

STEP 3: Facing the rear of the engine power head, identify injection point #2 as indicated by the yellow arrow in the picture to the right. At the position indicated, remove a 1" section of the hose with tubing cutters.





Step 4: Insert the Verdao Easy Injector # 2 in this location and “double” clamp as shown in the picture to the left. Using the clamps provided install the 3/8” injector line as shown.



Step 5: Mount the SF 200 unit with black cable ties provided as shown in picture to the Left. Route the flush injector lines to injectors # 1 & # 2 as shown. Using stainless steel clamps provided secure the lines. Attach the 1/2” main feed line to the inlet as shown.

Step 6: Feed the 1/2” inlet line through the stock rigging tube (orange arrow). It is suggested that you use a lubricant such as soapy water (mix with dishwashing detergent) or silicone spray lube to simplify this operation. If you are using the ACS 2 or 3, follow that instruction set, otherwise go to Step 7.

Step 7: Mount the Remote Access panel according to the instructions provided and connect the SF 200 Inlet line and clamp securely.

Step 8: Test your installation for any leaks.